

User Guide for Logo Projector

Professional Entertainment Technology

TABLE OF CONTENTS

1. Introduction

2. Safety Instruction

3. Description

4. Operation and Technical Specification

5. Lamp Installation or Replacement

6. Inserting/Exchanging Rotating Gobos

7. Beam Angle

8. Stand-alone Operation

9. Troubleshooting

10. Fixture Cleaning

1. Introduction

Thank you for purchasing Wild Tech's Logo Projector. The fixture is a powerful tool creating a long lasting visual effect. It comes with 7 D size gobos and an inter-changeable slot for custom-made gobos. With speed and direction adjustable function, the Logo projector is perfect for discos, restaurants, department stores, etc.

2. Safety Instruction



WARNING

Please read the instruction carefully which includes important information about the installation, usage and maintenance.

- ◆ Please keep this user guide for future consultation. If you sell the unit to another user, please be sure they also receive this instruction booklet.
- ◆ Unpack and check carefully about there is no transportation damage before using the unit.
- ◆ Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.
- ◆ It's important to ground the yellow/green conductor to earth in order to avoiding electric shock.
- ◆ For indoor use only and only in a dry location.
- ◆ The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- ◆ Disconnect mains power before fuse/lamp replacement or servicing.
- ◆ Replace fuse/lamp with the same type only.
- ◆ Make sure there are no flammable materials close to the unit as it is fire hazard.
- ◆ Use safety cable when fixes this unit.
- ◆ Maximum ambient temperature is TA: 40°C. Don't operate it where the temperature is higher than this.
- ◆ Surface temperature may reach up to 85°C during operating. Don't touch the housing barehanded during its operation. Turn off the power and allow about 15 minutes for the unit to cooling down before replacing bulb or servicing.

- ◆ In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- ◆ Don't connect the device to any dimmer pack or power pack.
- ◆ Do not touch any wire during operation as high voltage might be causing electric shock.

Warning

- ◆ To prevent or reduce the risk of electrical shock or fire, do not expose the unit to rain or moisture.
- ◆ Never touch bulb with bare fingers as it is very hot after using.
- ◆ Hot lamp explosion hazard. Do not open the unit within five minutes after switching off.
- ◆ Do not start on the unit without bulb enclosure or housing is damaged.
- ◆ The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.
- ◆ Do not look directly at the light while the bulb is on.

Caution

 
There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. If the unit requires service, please contact your nearest dealer.

Rigging the fixtures

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture.

The installation must be carried out by qualified service people only. The device should be installed out of reach of people and outside areas where persons may walk by or be seated.

3. Description

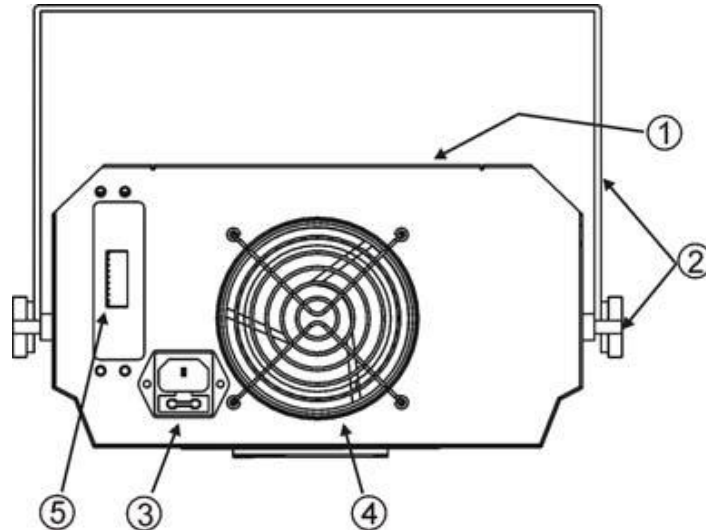

1. **Optical lens:** Manual focus adjustment.
2. **Hanging bracket:** with 2 knobs on both sides to fasten the unit and a mounting hole to fix a mounting hook.
3. **Mains input:** IEC socket and integrated fuse holder, connect to main power cable.
4. **Cooling fan:** Cool down the working temperature.
5. **Dip switches:** Enable stand-alone model:
Pin 10 is ON: Pin 9 for motor direction & pins 1~8 for speed adjustable
Pin 10 is OFF: The unit stops rotating.

4. Operation and Technical Specification

 
- Plugging into the mains power, the fixture starts running. The Logo Projector runs in automatic mode.
- Adjustable gobo rotation direction and speed by dip switches.
- Focus adjustable and fan cooled.

Specification:


- Voltage: AC 120V~60Hz 230V/240V/250V~50Hz/60Hz
- Fuse: 20mm glass 250V T6.3A / 20mm glass 250V T5A
- Bulb: EHJ 24V 250W
- Dimension: 306 x 263 x 140 mm
- Weight: 8.2 kgs

5. Lamp installation or replacement


- Always switch off the mains supply and never handle the lamp or luminarie when it is hot.
- Do not touch the bulb with bare hands. If it happen, clean the lamp with denatured alcohol and wipe with a lint free cloth before installing.

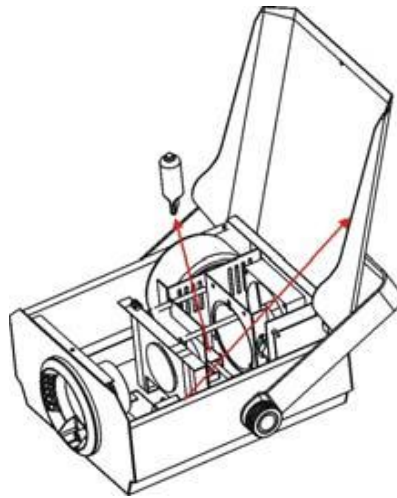

 
6. Inserting/Exchanging rotating gobos

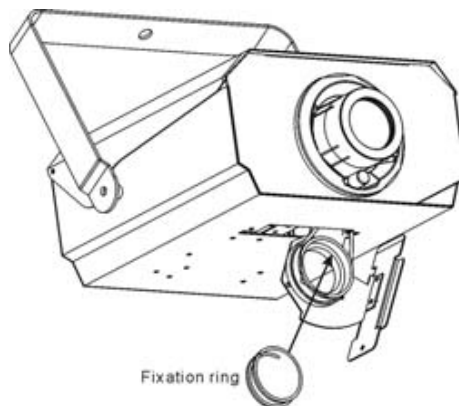

Gobo list:

 




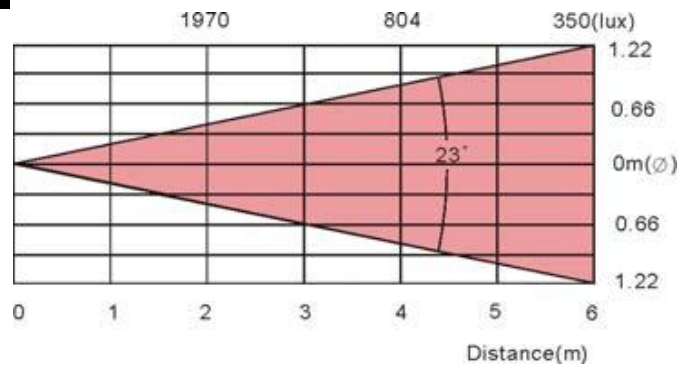 





 
7. Beam angle



The Projector is best to be placed 5 meters from wall, and from this distance the light effect will cover an area of 2.1 m x 2.1 m.

8 . Stand-Alone Operation

 Enable stand-alone model: Pin 10 is ON: Pin 9 for motor direction & pins 1~8 for speed adjustable

Speed	Dip Switches setting	Function
Speed 1	↓  ON 1 2 3 4 5 6 7 8 9 10	Slow ↓ Fast
Speed 2	↓  ON 1 2 3 4 5 6 7 8 9 10	
Speed 3	↓  ON 1 2 3 4 5 6 7 8 9 10	
Speed 4	↓  ON 1 2 3 4 5 6 7 8 9 10	
Speed 5	↓  ON 1 2 3 4 5 6 7 8 9 10	
Speed 6	↓  ON 1 2 3 4 5 6 7 8 9 10	
Speed 7	↓  ON 1 2 3 4 5 6 7 8 9 10	
Speed 8	↓  ON 1 2 3 4 5 6 7 8 9 10	
Speed 9	↓  ON 1 2 3 4 5 6 7 8 9 10	Direction
Speed 10	↓  ON 1 2 3 4 5 6 7 8 9 10	Stand-alone

9. Troubleshooting

Problem	Probable cause(s)	Suggested remedy
No light	No power to the fixture	Check power connections
	Blown fuse	If power is applied but does not light, please check and replace fuse if necessary.
	Burned out lamp	Install new lamp.
	Fixture too hot	Allow to cool down. Improve air flow around the unit.
No action	Sound too low to activate control circuit	Increase volume.
	Electrical malfunction	Refer to service technician.

10. Fixture Cleaning

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

☒ Clean with soft cloth using normal glass cleaning fluid.

☒ Always dry the parts carefully.

☒ Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

EC Declaration of Conformity

We declare that our products (lighting equipments) comply with the following specification and bears CE mark in accordance with the provision of the Electromagnetic Compatibility (EMC) Directive 89/336/EEC.

EN55014-2: 1997 A1:2001, EN61000-4-2: 1995; EN61000-4-3:2002;
EN61000-4-4: 1995; EN61000-4-5: 1995, EN61000-4-6:1996,
EN61000-4-11: 1994.

&

Harmonized Standard

EN60598-1: 2000+ALL:2000+A12:2002
Safety of household and similar electrical appliances
Part 1 : General requirements

Innovation , Quality , Performance