

# TASCAM®

TEAC PROFESSIONAL



## PATCH BAY PB-32P



The PB-32 Series Patch Bays are ideal for any application in multitrack recording process. They are available in four basic configurations listed below, and can be mounted in 19" EIA



rack. They also features "normalled" connections to provide the maximum in patching convenience without the need to patch through unused circuits.

## Specifications

Number of channels: 16  
 Type of jacks: RCA pin jacks and/or 1/4" phone jacks  
 Front jacks with switches: white  
 Rear jacks without switches: red  
 Dimensions (W x H x D): 482 x 44 x 75 (19" x 1-3/4" x 3")  
 Weight: 1.3 kg (2-14/16 lbs.)

Model name	Type of jacks	Internal circuit connection (FRONT) (REAR)
PB-32P	1/4" phone jack (front and rear)	Upper Lower
PB-32R	RCA pin jack (front and rear)	Upper Lower
PB-32H	1/4" phone jack (front) RCA pin jack (rear)	Upper Lower
PB-32W	1/4" phone jack (leftmost 12 jacks, front and rear)  RCA pin jack (rightmost 20 jacks, front and rear)	Leftmost 12 jacks (same as PB-32P) Upper Lower Rightmost 20 jacks (same as PB-32R) Upper Lower


## External Dimensions

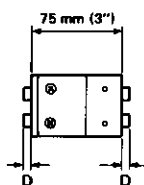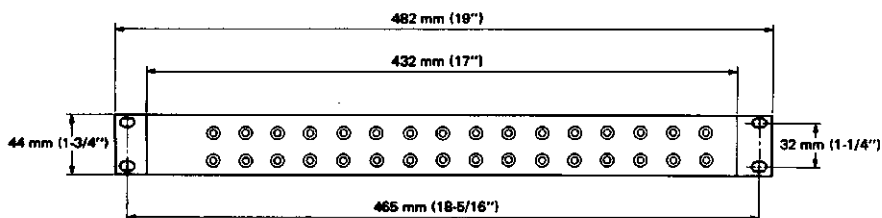

D: 2 mm (1/16") (1/4" phone jacks)  
 7 mm (1/4") (RCA pin jacks)


# Using the Tascam PB-32P: a Half-Normalled Patch Bay

## Typical Patch (Default Setting for Playback)

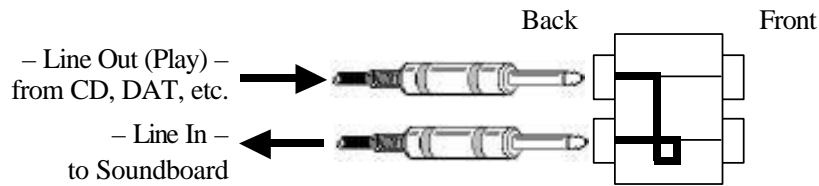

Signal flows from the top jack in the back to the bottom jack in the back. Therefore, no patch cables are required in the front jacks for typical playback operation.


## Special Patch (Recording with the Sound System)

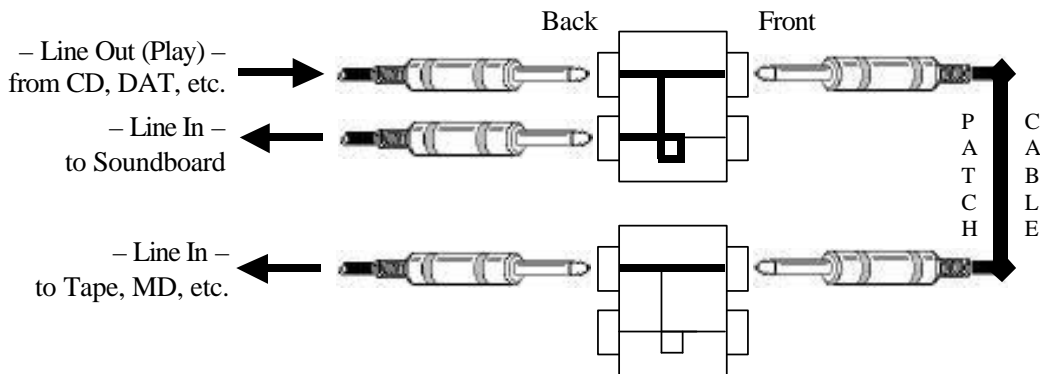

Like in the "Typical Patch" example, the signal flows from the top jack in the back to the bottom jack in the back. However, in this special patch setup, the signal also flows from the top jack in the front *through a patch cable* to the "Line In" of the device you wish to record onto. **To record from the soundboard, simply run a patch cable from the "C/ROOM Out" on the patch bay to the "Line In" of the device you wish to record onto like in the above picture.**

Note: If headphones are plugged into the PHONES jack on the soundboard, the signal to "C/ROOM Out" is cut off!!

## Special Patch (Adding an External Device to the Sound System for Playback)

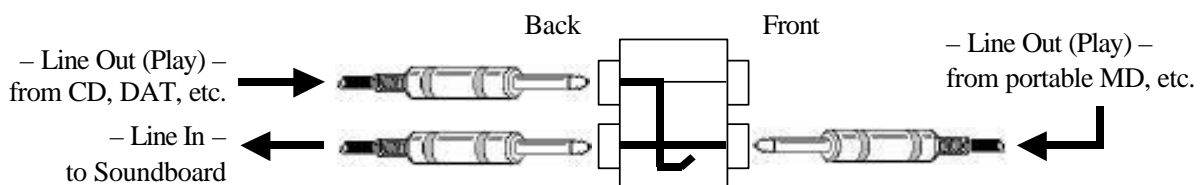

This special patch setup is useful if you wish to temporarily introduce a new component to the sound system.

Note: Inserting a cable in the bottom jack in the front jack disconnects the signal flow from the top jack in the back to the bottom jack in the back.