



## PRECAUTIONS

### PLEASE READ CAREFULLY BEFORE PROCEEDING

- Please keep this manual in a safe place for future reference.

### **WARNING**

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

#### Do not open

• This device contains no user-serviceable parts. Do not open the device or attempt to disassemble the internal parts or modify them in any way. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

#### Water warning

• Do not expose the device to rain, use it near water or in damp or wet conditions, or place it on any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. If any liquid such as water seeps into the device, have the device inspected by qualified Yamaha service personnel.

### **CAUTION**

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the device or other property. These precautions include, but are not limited to, the following:

#### Location

• Do not place the device in an unstable position where it might accidentally fall over.  
• Do not place the device in a location where it may come into contact with corrosive gases or salt air. Doing so may result in malfunction.  
• Construction work should be carried out in accordance with construction-related law and always by a professional contractor. If the device installation requires construction work, make sure to observe the following precautions.  
- Choose mounting hardware and an installation location that can support the weight of the device.  
- Avoid locations that are exposed to constant vibration.  
- Use the required tools to install the device.  
- Inspect the device periodically.

#### Connections

• Before connecting the device to a power amplifier, turn off the power for all devices. Before turning the power on or off for all devices, set all volume levels to minimum.  
• Use only speaker cables for connecting speakers to the speaker jacks. Use of other types of cables may result in fire.

#### Maintenance

• Do not wipe the outer packaging with benzine, thinner, or synthetic detergent and do not use electrical contact cleaner. These may damage the outer packaging and dissolve the parts.

#### Handling caution

 
• Do not insert your fingers or hands in any gaps or openings on the device (ports).  
• Avoid inserting or dropping foreign objects (paper, plastic, metal, etc.) into any gaps or openings on the device (ports). If this happens, have the device inspected by qualified Yamaha service personnel.

## INSTALLING THE SPEAKERS

Install the speakers onto the ceiling with the supplied hardware. Ensure that the strength of the ceiling rail is sufficiently strong.

### Pre-installation (Preparation of the Cable)

Use stranded wire for cables attached to the Euroblock connector. Strip their insulation as shown in the figure and connect them.



**NOTE**  
Do not plate stranded wires by solder. Doing so will cause the wire to break.

### 1 CUT OUT A HOLE IN THE CEILING

1 Put the supplied cutout template to the ceiling and draw a circle by tracing it.  
Make sure to use the cutout template so that hole is the correct diameter.

**NOTE**  
If you use a circular cutter, set the diameter with the cutout template.


2 Cut the hole by tracing the circle.  
Be careful to prevent chips or powder entering your eyes while cutting the hole.

### 2 INSTALL THE TILE RAILS AND O-RING

1 Insert the two tile rails through the cut hole and place them on the ceiling surface within your reach. Be sure that each tile rail is oriented as shown below.


2 Insert the folded O-ring through the cut hole and open it in the ceiling.

3 Secure the O-ring and tile rails with supplied two screws through either slot of both O-ring brackets.

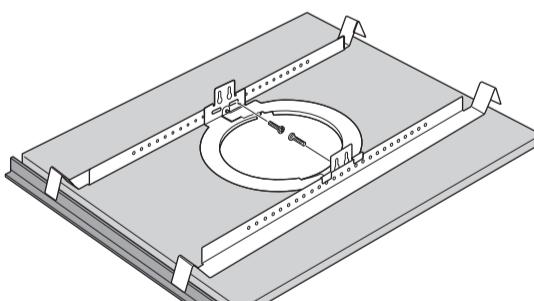


### 3 CONNECT THE WIRING TO THE CONNECTOR AND FIX THE CABLE


1 Pull the wiring from the amplifier through the cut hole.  
2 Loosen the screw at the right of the terminal cover to open the terminal cover and remove the Euroblock connector.

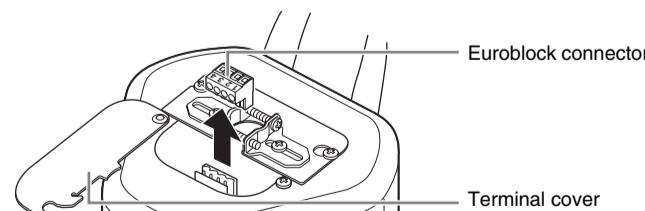

3 After loosening the terminal screws of the Euroblock connector with a flat-blade screwdriver, insert the cable into each terminal and tighten the screws. Make sure that cables cannot be pulled out.

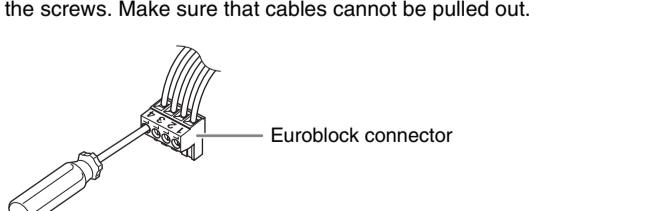

 **NOTE**  
Use a flat-blade screwdriver with a blade less than 3 mm (0.1 in.).



- Do not operate the device if the sound is distorting. Prolonged use in this condition could cause overheating and result in fire.
- When choosing a power amplifier for use with this device, make sure that the output power of the amplifier is lower than the power capacity of this device (see SPECIFICATIONS). Even if the output power of the amplifier is lower than the power capacity of this device (program), use of excessive input signals resulting in clipping may cause damage to the device.
- Malfunction or fire may occur especially when the following sounds or noises are generated:
  - feedback, when using a microphone
  - continuous and extreme volume sound from a musical instrument
  - extreme continuous distorted sound
  - noise caused by plugging/unplugging the cable while the amplifier is turned on

### NOTICE

To avoid the possibility of malfunction/damage to the product, damage to data, or damage to other property, follow the notices below.

#### • Handling and Maintenance

- Do not place vinyl, plastic or rubber objects on the device, since this might discolor the panel.
- When cleaning the device, use a dry and soft cloth. Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.
- Condensation can occur in the device due to rapid, drastic changes in ambient temperature-when the device is moved from one location to another, or air conditioning is turned on or off, for example. Using the device while condensation is present can cause damage. If there is reason to believe that condensation might have occurred, leave the device for several hours until the condensation has completely dried out.
- Be sure to observe the amplifier's rated load impedance (see SPECIFICATIONS), particularly when connecting speakers in parallel. Connecting an impedance load outside the amplifier's rated range can damage the amplifier.
- When connecting the speakers with high impedance, be sure that the total rated input capacity of the speakers does not exceed the output power of the amplifier.
- When using a high-impedance speaker connection, make sure the audio signal is passed through an 80 Hz or above high-pass filter before being input to the speakers.
- **ABOUT THE PROTECTION CIRCUIT**  
This speaker system has an internal protection circuit that shuts off the speaker unit when an excessive input signal is applied. If the speaker unit emits no sound, reduce the volume level of the amplifier immediately. The sound will return automatically in several seconds.
- Do not swing the speaker by its strap.
- Do not place the speaker face down with the grille attached, as deformation of the grille may result.
- When placing the speaker face down, always place it on a flat and smooth surface.
- Do not touch the speaker driver unit.

#### • About This Manual

The illustrations as shown in this manual are for instructional purposes only, and may appear somewhat different from those on your device.

**Yamaha cannot be held responsible for damage caused by improper use or modifications to the device.**

The contents of this manual apply to the latest specifications as of the printing date. Since Yamaha makes continuous improvements to the product, this manual may not apply to the specifications of your particular product. To obtain the latest manual, access the Yamaha website then download the manual file. Since specifications, equipment or separately sold accessories may not be the same in every locale, please check with your Yamaha dealer.


There are two acceptable wiring methods.

### **CAUTION**

When connecting with low impedance, take note of the combined resistance.


#### Using Loop-Through Terminals

For this method, cables are connected from terminals 1 and 4 to the subsequent speaker. If the Euroblock connector is disconnected from a speaker, all subsequent speakers will not work. This can be useful to identify which speaker has a problem.

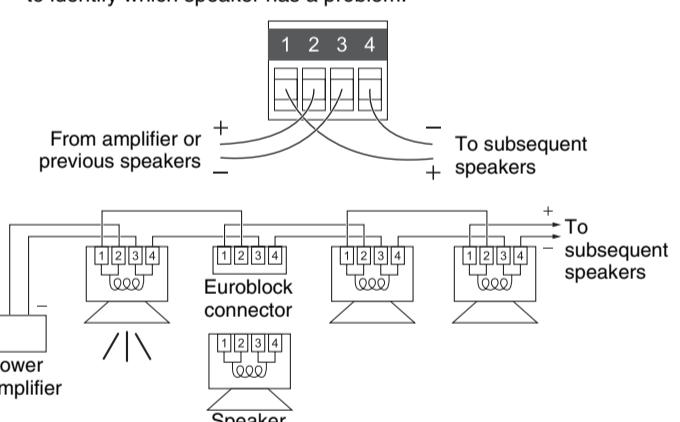


#### Paralleling Input Terminals

For this method, cables are connected to terminals 2 and 3 of each speaker. Since the cables are connected via Euroblock connectors, subsequent speakers can work even if a problem occurs with a speaker.

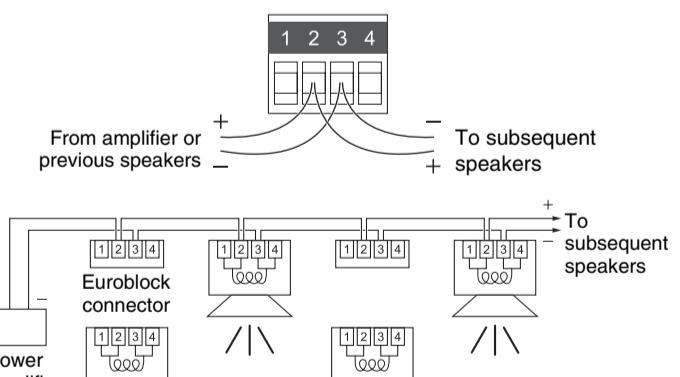


#### 4 Plug the connected Euroblock connector into the socket in the speaker.

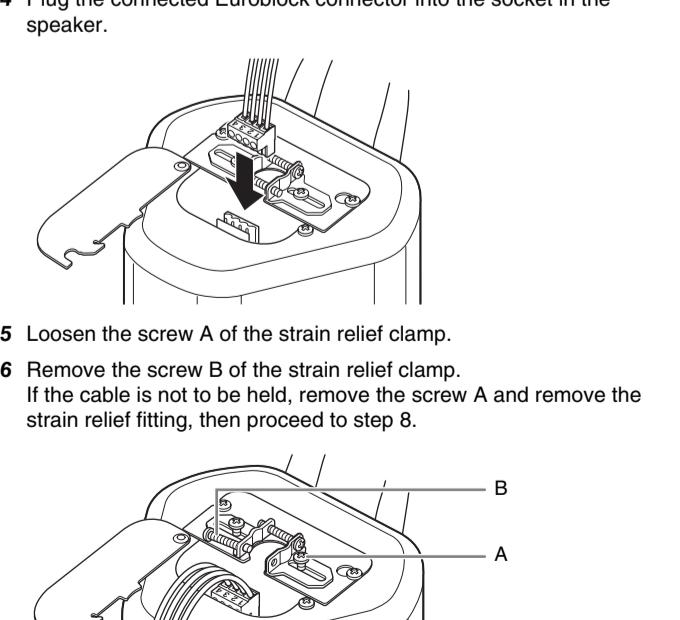

#### 5 Loosen the screw A of the strain relief clamp.

6 Remove the screw B of the strain relief clamp.  
If the cable is not to be held, remove the screw A and remove the strain relief fitting, then proceed to step 8.

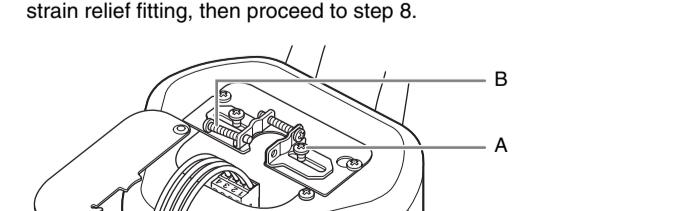

## UNPACKING

Unpack the contents and confirm that all the following items are included.

- Speaker x 2
- Screw x 4
- O-ring x 2
- Tile Rail x 4
- Grille x 2
- Cutout Template x 1
- Owner's Manual (this manual)
- Speaker cable and safety wire are not included.

## SPECIFICATIONS


Type	Full Range with Back Can, Bass-reflex	
Component	4" (10 cm) Full Range	
Coverage Angle (500 Hz - 4 kHz on average)	130° conical	
Nominal Impedance	8 Ω	
Power Rating	NOISE	30 W
	PGM	60 W
	MAX	120 W
Sensitivity (1W, 1m) *1	87 dB SPL	
Maximum SPL (Calculated, 1m) *2	108 dB SPL	
Frequency Range (-10 dB) *1	80 Hz - 20 kHz	
Connector	Euroblock (4 pin) x 1 (input: +/-, loop-thru: +/-) Max. wire size 12 AWG (2.5 mm <sup>2</sup> )	
Transformer Taps	70 V	30 W, 15 W, 7.5 W, 3.8 W
	100 V	30 W, 15 W, 7.5 W
Overload Protection	PolySwitch	
Magnetically Shielded	No	
Enclosure	Shape	Back Can
	Back Can Material	Steel 1mm, Black
	Baffle Material	HIPS
Grille	Material	Powder coated perforated steel (t=0.6 mm) Trim Ring: ABS
	Finish	VXC4 : Black painting (approximate value: Munsell N3) VXC4W : White painting (approximate value: Munsell 9.3)
Dimensions (Speaker only)	Ø225 x 194H mm (Ø8 7/8" x 7 5/8"H)	
Net Weight (Speaker only, 1 piece)	2.6 kg (5.7 lbs)	
Cutout Size	Ø186 mm (Ø7 5/16")	
Required ceiling board thickness	5 mm - 35 mm *3	
Conduit Tube	Up to 1/2"	
Packaging	Packaged in pair	

\*1: Half-space (2n)


\*2: Calculated based on power rating and sensitivity, exclusive of power compression.

\*3: 30 mm or less for the Anti-Drop Tab.

## DIMENSIONS

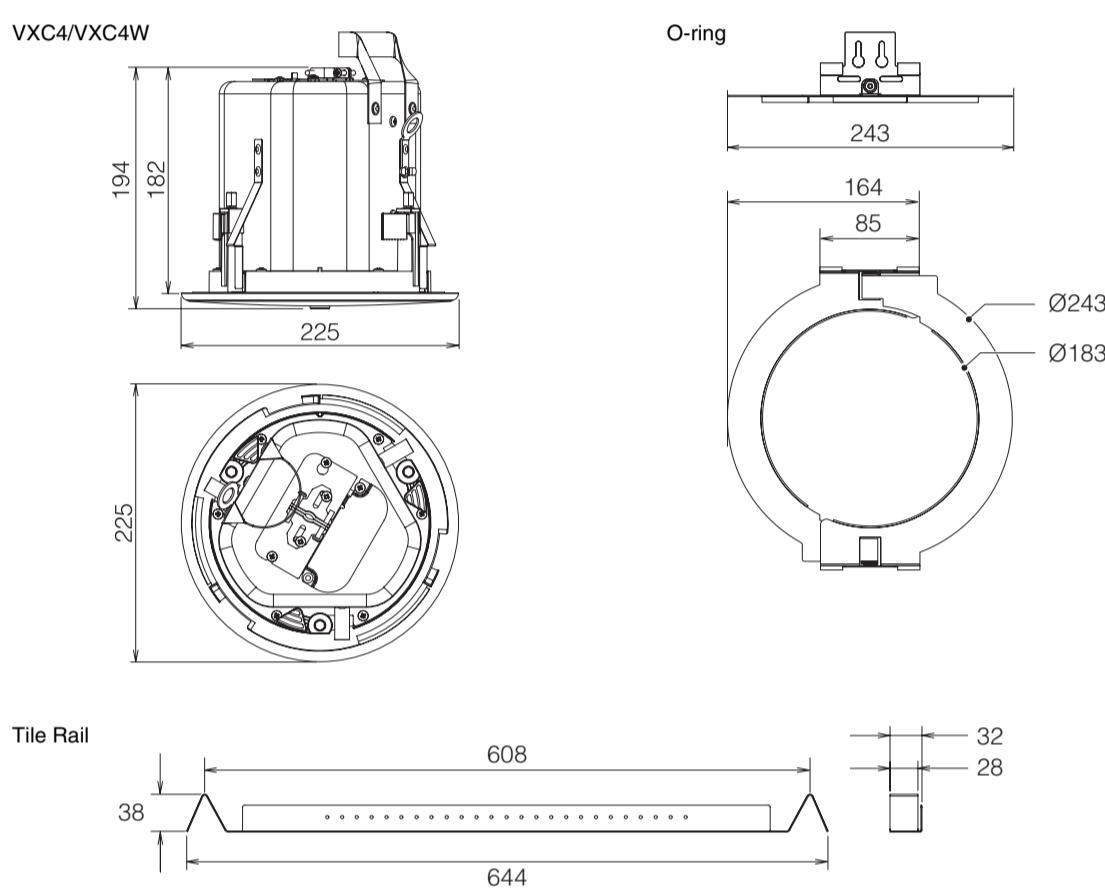


#### 7 Hold the cable in the strain relief clamp, then tighten screws A and B.

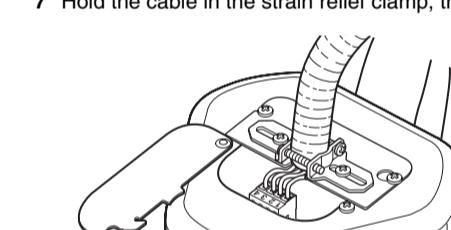

When all the Anti-Drop Tabs cross over the O-ring, the speaker is held temporarily. You can release your hands from the speaker.


#### 8 Close the terminal cover and tighten the screw.

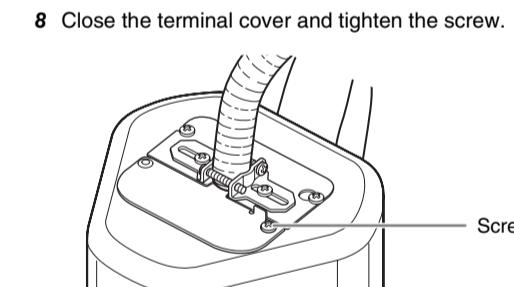

To release the speaker from the O-ring, press the Anti-Drop Tabs. These are located above the ▲ mark near the edge of the cabinet's face.

#### 4 FIX THE SPEAKERS ONTO THE CEILING



1 Attach the safety wire to the safety wire ring, and connect the wire to an independent support point, such as a joist.

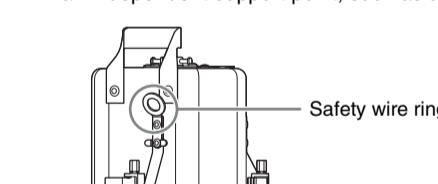

**CAUTION**  
Always take measures to prevent the speaker falling down.


If the safety wire is too short, prepare another wire appropriate for the speaker weight and installation conditions. If the wire is too long, should the speaker fall, the wire may break as a result of too much strain.

2 Push up the speaker slowly into the ceiling, taking care not to trap the cable.

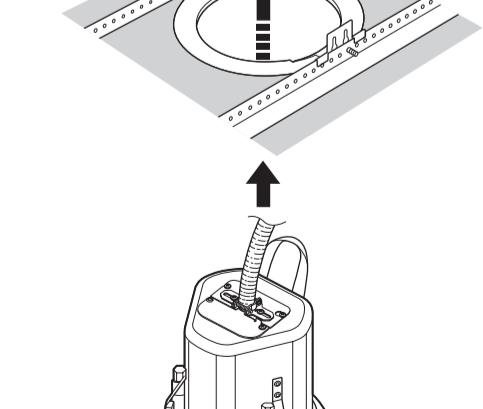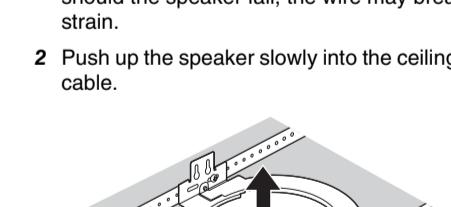

3 Turn the screwdriver a half turn counterclockwise to loosen the attachment screw. This makes the clamp easier to align in the channel.

4 Turn the screwdriver clockwise to tighten the attachment screw. The first turn of the attachment screw aligns the clamp with the channel. Further turns move the clamp down the channel to pull the speaker up into the ceiling.

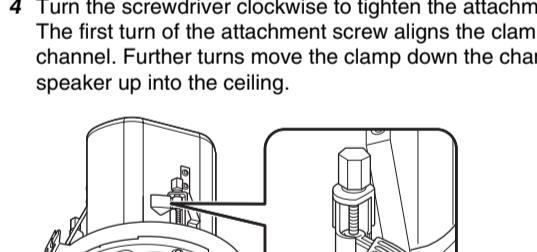


**CAUTION**  
• Do not over-tighten the attachment screw. Otherwise, the attachment screw and clamp will break.

• Do not turn any screws that do not have a guide sleeve in the screw hole. Otherwise, the speaker may fall or malfunction.

#### 5 SET THE LINE VOLTAGE/IMPEDANCE AND POWER


Select the line voltage/impedance (100V/70V/8Ω) and power tap for 100V/70V line distributed system, by rotating the tap selector switch on the front side of the speaker with a flat-blade screwdriver.

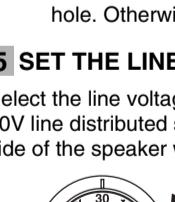

**CAUTION**  
The "X" position should not be selected. The 8Ω position should be selected for 8Ω audio systems only. If the setting is incorrect, it may cause malfunction of the speaker and amplifier.

#### 6 ATTACH THE GRILLE

Fit the grille to the cabinet front and turn it clockwise.

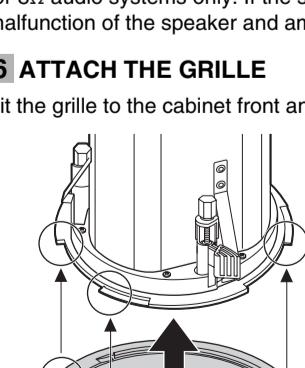

## Important Notice: Guarantee Information for customers in European Economic Area (EEA) and Switzerland

### Important Notice: Guarantee Information for customers in EEA\* and Switzerland

For detailed guarantee information about this Yamaha product, and Pan-EEA\* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country. \* EEA: European Economic Area

### Wichtiger Hinweis: Garantie-Information für Kunden in der EWR\* und der Schweiz

Für nähere Garantie-Information über dieses Produkt von Yamaha, sowie über den Pan-EWR\* und Schweizer Garantiservice, besuchen Sie bitte entweder die folgend angegebene Internetadresse (eine druckfähige Version befindet sich auch auf unserer Webseite), oder wenden Sie sich an den für Ihr Land zuständigen Yamaha-Vertrieb. \*EWR: Europäischer Wirtschaftsraum

### Remarque importante: informations de garantie pour les clients de l'EEE et la Suisse

Pour des informations plus détaillées sur la garantie de ce produit Yamaha et sur le service de garantie applicable dans l'ensemble de l'EEE ainsi qu'en Suisse, consultez notre site Web à l'adresse ci-dessous (le fichier imprimable est disponible sur notre site Web) ou contactez directement Yamaha dans votre pays de résidence. \*EEE : Espace Economique Européen

### Belangrijke mededeling: Garantie-informatie voor klanten in de EER\* en Zwitserland

Voor gedetailleerde garantie-informatie over dit Yamaha-product en de garantiservice in heel de EER\*, gaat u naar de onderstaande website (u vindt een afdrukbaar bestand op onze website) of neemt u contact op met de vertegenwoordiging van Yamaha in uw land. \* EER: Europees Economische Ruimte

### Aviso importante: información sobre la garantía para los clientes del EEE\* y Suiza

Para una información detallada sobre este producto Yamaha y sobre el soporte de garantía en la zona EEE\* y Suiza, visite la dirección web que se incluye más abajo (la versión del archivo para imprimir está disponible en nuestro sitio web) o póngase en contacto con el representante de Yamaha en su país. \* EEE: Espacio Económico Europeo

### Avviso importante: informazioni sulla garanzia per i clienti residenti nell'EEA\* e in Svizzera

Per informazioni dettagliate sulla garanzia relativa a questo prodotto Yamaha e l'assistenza in garanzia nei paesi EEA\* e in Svizzera, potete consultare il sito Web all'indirizzo riportato di seguito (è disponibile il file in formato stampabile) oppure contattare l'ufficio di rappresentanza locale della Yamaha. \* EEA: Area Economica Europea

### Aviso importante: informações sobre as garantias para clientes da EEE\* e da Suíça

Para obter uma informação pormenorizada sobre este produto de Yamaha e sobre o serviço de garantia na EEE\* e na Suíça, visite o site a seguir (o arquivo para impressão está disponível no nosso site) ou entre em contacto com o escritório de representação da Yamaha na sua país. \* EEE: Área Económica Europeia

### Σημαντική σημείωση: Πληροφορίες εγύπτωσης για τους πελάτες στον ΕΟΧ\* και Ελβετία

Για λεπτομέρειες πληροφορίες εγύπτωσης σχετικά με το παρόν πρόϊόν της Yamaha και την Ελβετία, επικορείτε την παρακάτω ιστοσελίδα (Εκπτώσιμη μορφή) ή είναι διαθέσιμη στην αντιπροσωπεία της Yamaha στη χώρα σας. \* ΕΟΧ: Ευρυπολιτικός Οικονομικός Ήπος

### Viktigt: Garantiinformation för kunder i EES-området\* och Schweiz

För detaljerad information om denna Yamahaproduct samt garantiservice i hela EES-området\* och Schweiz kan du antingen besöka nedanstående webbadress (en utskriftnävlig fil finns på webbsidan) eller kontakta Yamahas officiella representant i ditt land. \* EES: Europeiska Ekonomiska Samarbetsområdet

### Viktig merknad: Garantiinformasjon for kunder i EØS\* og Sveits

Detaljert garantiinformasjon om dette Yamahaproduktet og garantiservice for hele EØS-området\* og Sveits kan fås enten ved å besøke netttadressen nedenfor (utskriftsversjon finnes på våre nettsider) eller kontakte Yamahakontoret i landet der du bor. \*EØS: Det europeiske økonomiske samarbeidsområdet

### Vigtig oplysning: Garantioplysninger til kunder i EØO\* og Schweiz

De kan finde detaljerede garantioplysninger om dette Yamahaproduct og den fælles garantiserviceordning for EØO\* (og Schweiz) ved at besøge det websted, der er angivet nedenfor (der findes en fil, som kan udskrives, på vores websted), eller ved at kontakte Yamahas nationale repræsentationskontor i det land, hvor De bor. \*EØO: Det Europæiske Økonomiske Område

### Tärkeä ilmoitus: Takuutiedot Euroopan talousalueen (ETA) ja Sveitsin asiakkaille

Tämän Yamaha-tuotteen sekä ETA-alueen ja Sveitsin takuuosa koskevat yksityiskohtaiset tiedot saatetaan olevasta nettosoitteesta. (Tulostettava tiedostaa saatavissa sivustollamme.) Voitte myös ottaa yhteyttä paikalliseen Yamaha-edustajaan. \*ETA: Euroopan talousalue

### Ważne: Warunki gwarancyjne obowiązujące w EOG\* i Szwajcarii

Aby dowiedzieć się więcej na temat warunków gwarancyjnych tego produktu firmy Yamaha i serwisu gwarancyjnego w całym EOG\* i Szwajcarii, należy odwiedzić wskazaną ponizej stronę internetową (Plik gołowy do wydruku znajduje się na naszej stronie internetowej) lub skontaktować się z przedstawicielstwem firmy Yamaha w swoim kraju. \*EOG — Europejski Obszar Gospodarczy

### Důležité oznámení: Záruční informace pro zákazníky v EHS\* a ve Švýcarsku

Podrobnejší záruční informace o tomto Yamahaproduktu už všechny servisní výrobce v celém EHS\* a ve Švýcarsku naleznete na níže uvedené webové adrese (soubor k tisku je dostupný na našich webových stránkách) nebo se můžete obrátit na zástupce firmy Yamaha ve své zemi. \*EHS: Evropský hospodářský prostor

### Fontos figyelmezetés: Garancia-információk az EGT\* területén és Svájcban elő vásárlók számára

Ajánlott Yamaha termékek vonatkozó részletes garancia-információk, valamint az EGT\*-en és Svájcra kiterjedő garanciális szolgáltatás tekintetében keresse fel webhelyünket az alábbi címen (a webhelyen nyomtatható fájl is talál), vagy pedig lépjen kapcsolatba az országában működő Yamaha képviseleti irodával. \*EGT: Európai Gazdasági Térseg

### Oluine märkus: Garantiiteave Europa Majanduspirkonna (EMP)\* ja Sveitsi klientidele

Täpselt teabe saamiseks selle Yamaha töote garantili ning kogu Euroopa Majanduspirkonna ja Sveitsi garantiiideeninduse kohta, külastage palun veebisaiti alljärgnevadel aadressil (meie saadaval prinditav faiil) või pöörduge Tele regiooni Yamaha esinduse poolle. \*EMP: Euroopa Majanduspirkond

### Svarigs pazīojums: garantijas informācija klientiem EEZ\* un Šveicē

Lai saņemtu detalizētu garantijas informāciju par šo Yamaha produktu, kā arī garantijas apkalpošanu EEZ\* un Šveicē, lūdzu, apmeklējiet zemāk norādīto laikāja vietnes adresi (tīmekļa vietnē ir pieejams drukājams failis) vai sazinieties ar jūsu valsti apkalpojošo Yamaha pārstāvniecību. \*EEZ: Eiropas Ekonomikas zona

### Děmesio: informació dėl garantijos pirkėjams EEE\* ir Šveicarijoje

Jei reikia išsamios informacijos apie šį „Yamaha“ produktą ir jo techninę priežiūrą visoje EEE\* ir Šveicarijoje, apsilankykite mūsų svetainėje toliau nurodytu adresu (svetainėje yra spausdinamas failas) arba kreipkitės į „Yamaha“ atstovybę savo šaliui. \*EEE – Eiropos ekonominė erdvė

### Dôležité upozornenie: Informácia o záruke pre zákazníkov v EHP\* a Švajčiarsku

Podrobnejšiu informáciu o záruke produktu od spoločnosti Yamaha a garančnom servise v EHP\* a Švajčiarsku nájdete na webovej stránke uvedenej nižšie (na našej webovej stránke je k dispozícii súbor na tlač) alebo sa obráťte na zástupcu spoločnosti Yamaha vo svojej krajine. \*EHP: Evropský hospodářský priestor

### Pomembno obvestilo: Informacija o garanciji za kupce v EGP\* in Švicariji

Za podrobnejše informacije o tem Yamahinem izdelku ter garancijskem servisu v celotnem EGP v Švici, obiščite spletno mesto, ki je navedeno spodaj (natisnjiva datoteka je na voljo na našem spletnem mestu), ali se obrnite na Yamahinega predstavnika v svoji državi. \*EGP: Evropski gospodarski prostor

### Vажно съобщение: Информация за гарантията за клиенти в ЕИП\* и Швейцария

За подробна информация за гарантията за този продукт на Yamaha и гаранционното обслукване в паневропейската зона на ЕИП\* и Швейцария или посетете посочените по-долу уеб сайти (на нашия уеб сайт има файл за печат), или се свържете с представителствата на Yamaha във вашата страна. \*ЕИП: Европейско икономическо пространство

### Notificare importantă: Informații despre garanție pentru clientii din SEE\* și Elveția

Pentru informații detaliate privind acest produs Yamaha și serviciul de garanție Pan-SEE\* și Elveția, vizitați site-ul la adresa de mai jos (fișierul imprimabil este disponibil pe site-ul nostru) sau contactați biroul reprezentanței Yamaha din țara dumneavoastră. \* SEE: Spațiul Economic European

<http://europe.yamaha.com/warranty/>

URL\_4

For details of products, please contact your nearest Yamaha representative or the authorized distributor listed below.

Pour plus de détails sur les produits, veuillez-vous adresser à Yamaha ou au distributeur le plus proche de vous figurant dans la liste suivante.

Para detalles sobre productos, contacte su tienda Yamaha más cercana o el distribuidor autorizado que se lista debajo.

Die Einzelheiten zu Produkten sind bei Ihrer unten aufgeführten Niederlassung und bei Yamaha Vertragshändlern in den jeweiligen Bestimmungsländern erhältlich.

Para detalles sobre productos, contacte su tienda Yamaha más cercana o el distribuidor autorizado que se lista debajo.

### ASIA

#### THE PEOPLE'S REPUBLIC OF CHINA

Yamaha Music & Electronics (China) Co., Ltd.  
2/F, Yunheadasi, 1818 Xinzha-Ju, Jingan-qu,  
Shanghai, China  
Tel: 400-051-7700

#### INDIA

Yamaha Music India Pvt. Ltd.  
Spazeledge building, Ground Floor, Tower A, Sector  
47, Gurgaon-Sohna Road, Gurgaon, Haryana, India  
Tel: 0124-485-3300

#### INDONESIA

PT. Yamaha Musik Indonesia (Distributor)  
Yamaha Music Center Bldg. Jalan Jend. Gatot  
Subroto Kav. 4, Jakarta 12930, Indonesia  
Tel: 021-520-2577

#### KOREA

Yamaha Music Korea Ltd.  
8F, 9F, Dongsing Bldg, 158-9 Samsung-Dong,  
Kangnam-Gu, Seoul, Korea  
Tel: 02-3467-3300

#### MALAYSIA

Yamaha Music (Malaysia) Sdn., Bhd.  
No.8, Jalan Perbandaran, Kelana Jaya, 47301  
Petaling Jaya, Selangor, Malaysia  
Tel: 03-78039090

#### SINGAPORE

Yamaha Music (Asia) Private Limited  
Block 202 Hougang Street 21, #02-00,  
Singapore 530202, Singapore  
Tel: 65-6747-4374

#### TAIWAN

Yamaha Music & Electronics Taiwan Co., Ltd.  
2F, No.1, Yuandong Rd, Banqiao Dist.  
New Taipei City 22063 Taiwan  
Tel: 02-7741-8888

#### VIETNAM

Yamaha Music Vietnam Company Limited  
15th Floor, Nam A Bank Tower, 201-203 Cach  
Mang Thang Tam St., Ward 4, Dist.3,  
Ho Chi Minh City, Vietnam  
Tel: +84-8-3818-1122

### OCEANIA

#### AUSTRALIA

Yamaha Music Australia Pty. Ltd.  
Level 1, 99 Quinsbridge Street, Southbank,  
Victoria 3006, Australia  
Tel: 3-9693-5111

#### COUNTRIES AND TRUST TERRITORIES IN PACIFIC OCEAN

Yamaha Corporation  
Sales & Marketing Division  
Nakazawa-cho 10-1, Naka-ku, Hamamatsu,  
Japan 430-8650  
Tel: +81-53-460-2312

### NORTH AMERICA

#### CANADA

Yamaha Canada Music Ltd.  
135 Milner Avenue, Toronto, Ontario,  
M1S 3R1, Canada  
Tel: 416-298-1311

#### U.S.A.

Yamaha Corporation of America  
6600 Orangetherope Avenue, Buena Park, CA 90620,  
U.S.A.  
Tel: 714-522-9011

### CENTRAL & SOUTH AMERICA

#### MEXICO

Yamaha de México, S.A. de C.V.  
Av. Insurgentes Sur 1647 Piso 9, Col. San José  
Insurgentes, Delegación Benito Juárez, México,  
D.F. C.P. 03900  
Tel: 55-5804-0600

#### BRAZIL

Yamaha Musical do Brasil Ltda.  
Rua Fidencio Ramos, 302 - Cj 52 e 54 - Torre B - Vila  
Olimpia - CEP 04551-010 - São Paulo/SP, BRAZIL  
Tel: 034-935-771

#### ARGENTINA

Yamaha Music Latin America, S.A.  
Sucursal Argentina  
Olga Cossettini 1553, Piso 9, Col. San José  
Manzanares Plaza P4  
Ofic. 401- Manzanares-Baruta  
Caracas Venezuela  
Tel: 011-374-1877

#### VENEZUELA

Yamaha Music Latin America, S.A.,  
Sucursal Venezuela  
C.C. Manzanares Plaza P4  
Ofic. 401- Manzanares-Baruta  
Caraças Venezuela  
Tel: 58-212-943-1877

#### PANAMA AND OTHER LATIN AMERICAN COUNTRIES

Yamaha Music Latin America, S.A.  
Torre Banco General, Piso No.7, Marbella,  
Calle 47 y Aquilino de la Guardia,  
Ciudad de Panamá, República de Panamá  
Tel: +507-269-5311

#### EUROPE

#### THE UNITED KINGDOM/IRELAND

Yamaha Music Europe GmbH (UK)  
Sherbourne Drive, Tilbrook, Milton Keynes,  
MK7 8BL, U.K.  
Tel: 01908-366700

#### SWITZERLAND/LIECHTENSTEIN

Yamaha Music